

How to link Java applet or FW-Voyager to third party web site

This document explains how to link Java Applet or FW-Voyager window to third party web site.

1. Java Applet Link

When the FlexWATCH uses directory authentication, you can load a Java Applet from FlexWATCH by loading a small size image before applet tag with ID and PASSWORD like below. Please note that you need to enter right ID and Password of FlexWATCH, when you write a script.

Sample Code

```
<HTML>
<body>



<applet mayscript codebase= http://IP_OF_FLEXWATCH/app/applet/ name=FWatch code='FWatch.class' width=356
height=264>
  <PARAM NAME="camnum" VALUE="1">
  <PARAM NAME="camrun" VALUE="FALSE">
  <PARAM NAME="speed" VALUE="0">
  <PARAM NAME="copyright" VALUE="www.flexwatch.com/copyright">
  <PARAM NAME="producer" VALUE="Powered By SEYEON TECH">
  <PARAM NAME="product" VALUE="FlexWATCH - Web Camera Server">
</applet>

</body>
</HTML>
```

2.FW-Voyatger link

Write following script in third party web page to link FW-Voyager window

Notice!

You can not disable Authentication process when you link FW-Voyager window to third party web page unlike Java applet link. Thus, if you want to let anyone have access to live video, you need to disable authentication mode in the FlexWATCH system. Otherwise, FW-Voyager window linked to third party web site will ask access ID and Password

http:// IP_OF_FLEXWATCH/advance/activex.htm

Example:

```
<HTML>
<body>

<a href=http://192.168.0.190/advance/activex.htm> test </a>

</body>
</html>
```